

Congratulations with your new SmartShare StraightShaper Satellite

To ensure a successful installation, please follow these steps before deploying the SmartShare StraightShaper Satellite in your network.

Note! If your network has more than one physical LAN connection, uses VLAN or if you want to segment your users into user groups, please contact your SmartShare reseller for further guidance.

1. **Unpack** the unit from the transport packaging
2. **Connect** the unit to power and turn on the power
3. **Connect a PC/laptop** via RJ45 cable to the Ext4 port on the SmartShare StraightShaper Satellite. (Please make sure that Wi-Fi is disabled on the PC/Laptop)
4. **Open a web browser** and go to the web address `http://192.0.2.1/` to open the GUI. (Modern operating systems will automatically start a web browser and go to this web address when the PC/laptop is connected to the Ext4 port)
5. **Log into the GUI** using: User Name: admin / Password: admin
6. **Go to the “Connection” tab** and enter the bandwidth values (Please ask your ISP if you don’t know these values)

Connection Speed	
Download Rate (kbit/s)*:	<input type="text"/>
Min. Download Rate (kbit/s)*:	<input type="text"/>
Upload Rate (kbit/s)*:	<input type="text"/>
Min. Upload Rate (kbit/s)*:	<input type="text"/>
Connection Type:	IP <input type="button" value="v"/>

- a. Download Rate (kbit/s) PIR/MIR value in kbit/s
- b. Min. Download Rate (kbit/s) CIR value in kbit/s
- c. Upload Rate (kbit/s) PIR/MIR value in kbit/s
- d. Min. Upload Rate(kbit/s) CIR value in kbit/s
- e. Connection Type IP

(If your internet router has a VPN to your office and/or datacenter, please select Connection Type “IP + VPN”)

7. **Press Confirm Changes** at the bottom of the screen
8. **If you subscribe to the filter**, go to the “Advanced” tab, otherwise go to step # 11
9. **Scroll down and fill out** according to this screen dump:

Internet Access Filter Weekly Schedule				
	Time (HH:MM)	Weekdays	Filter Name	User Groups
1	00:00 - 00:00	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	SUBSCRIPTION	ALL
2	<input type="text"/> - <input type="text"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="text"/>	<input type="text"/>

10. **Press Confirm Changes** at the bottom of the screen
11. **Press “Save and Activate New Configuration”**
12. **Power off** the SmartShare StraightShaper Satellite
13. **Connect** the SmartShare StraightShaper Satellite WAN port to the Internet router’s LAN port. (Use the same port on the router that was previously connected to the network switch)
14. **Connect** the SmartShare StraightShaper Satellite LAN port to the network switch. (Use the same port on the network switch that was previously connected to the Internet router)
15. **Power on** the SmartShare StraightShaper Satellite
16. **The LCD display** on the SmartShare StraightShaper Satellite shows the IP address of the unit and the status.

Congratulations! Your SmartShare StraightShaper Satellite is now optimizing your internet connection.

Note! If the LCD display shows an error message, please check the configuration – or contact your SmartShare reseller for further guidance.